

Mounting instructions

Side bar series: GM - GC- GBC- RM - RC

Volkswagen Crafter 2017+ MAN TGE 2017+ FWD - RWD - Electric



SW13 (23 Nm)



SW15 (35 Nm)



SW17 (46 Nm)



45 Min.

Version: December 2021



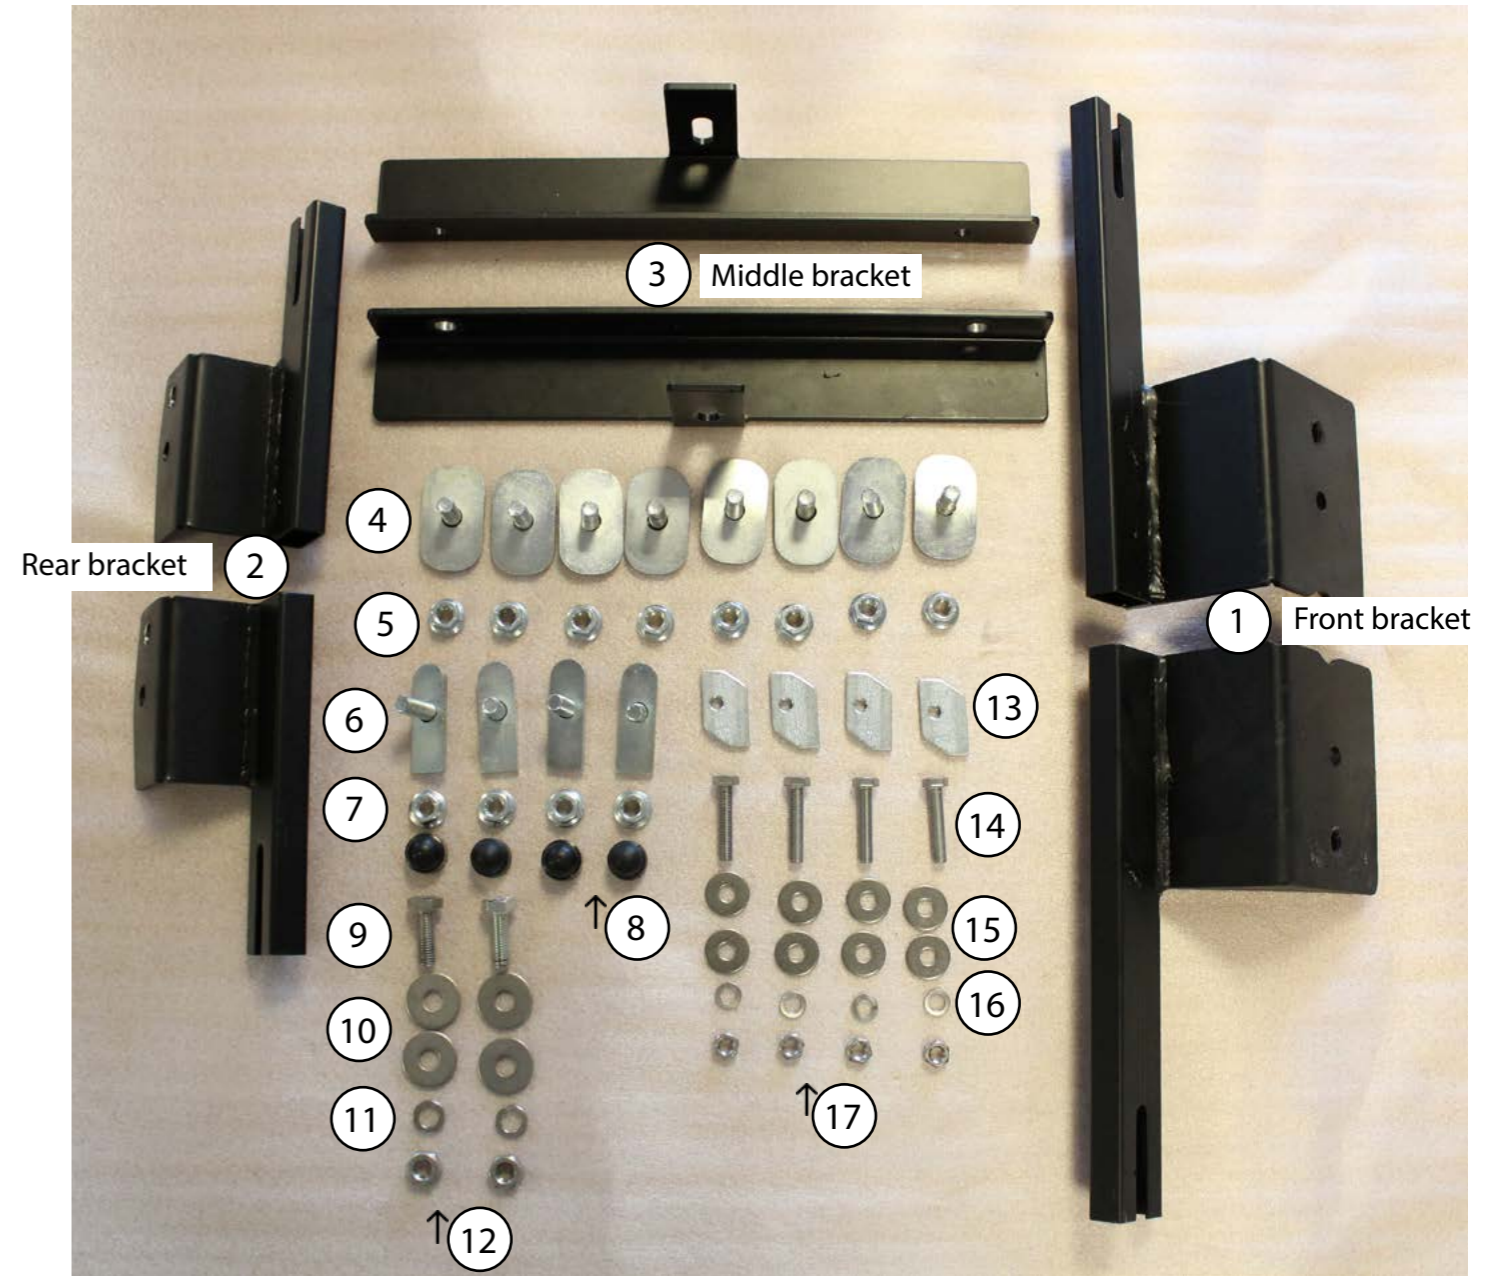




Fig. 1

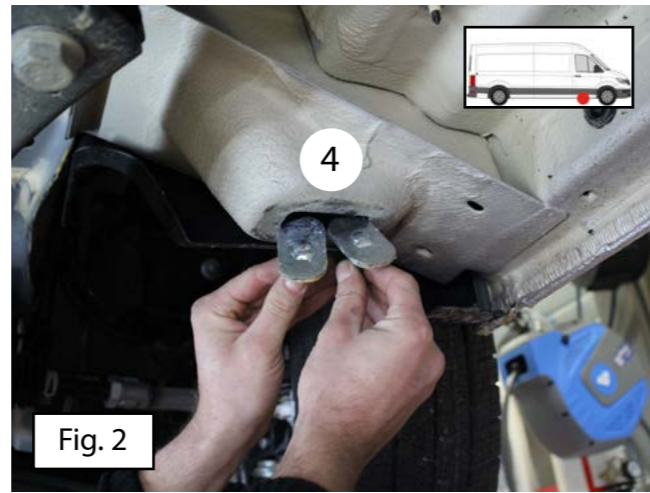


Fig. 2

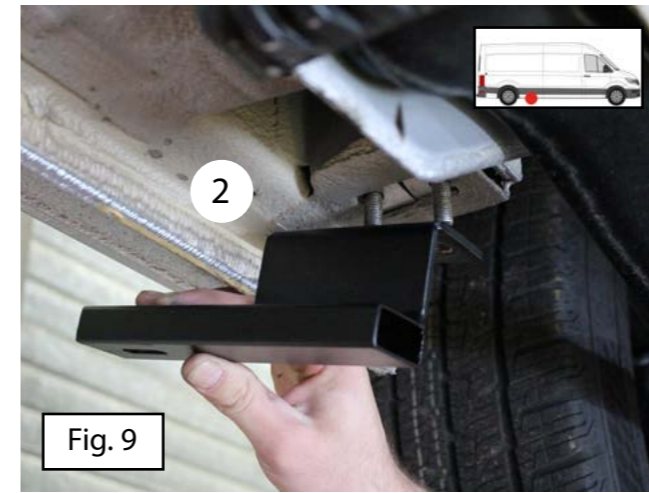


Fig. 9



Fig. 10

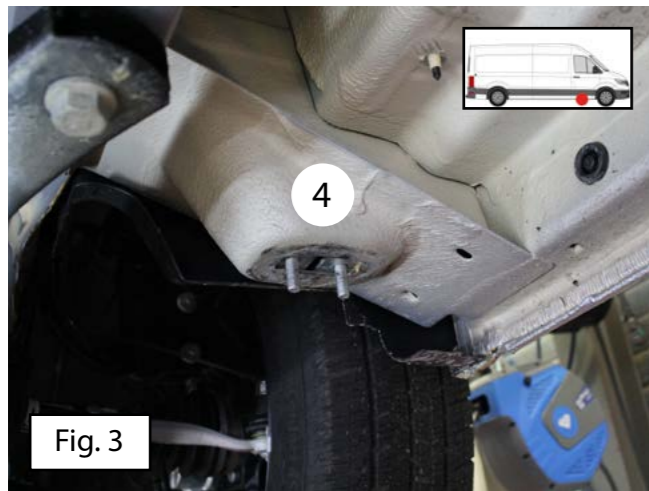


Fig. 3

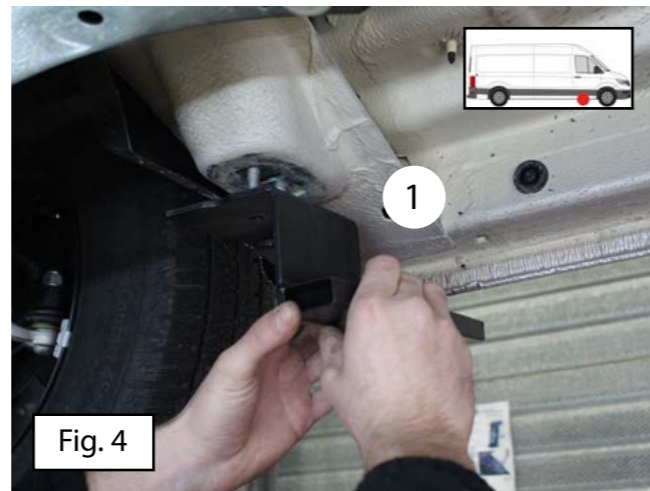


Fig. 4

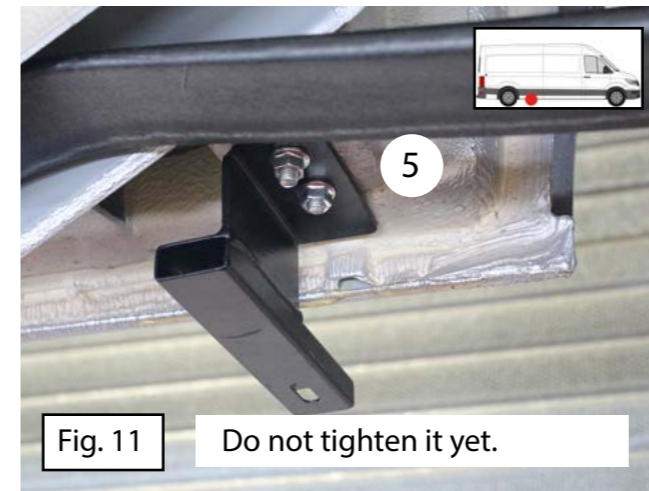


Fig. 11

Do not tighten it yet.



Fig. 12

Hold side bar next to the van and check where the middle bracket needs to be installed. Remove the 2 rubber caps.

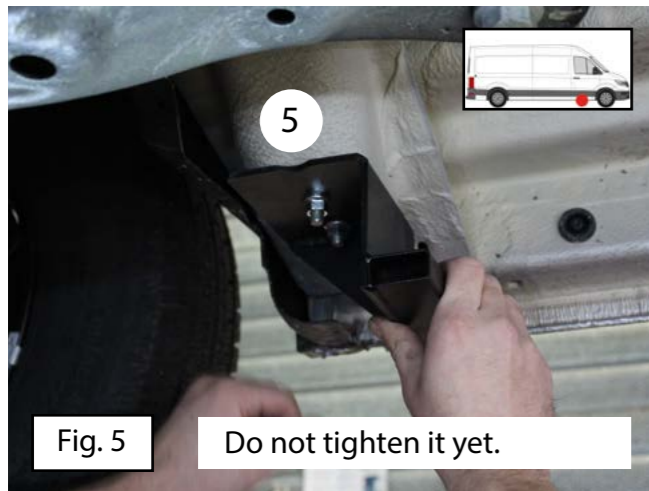


Fig. 5

Do not tighten it yet.

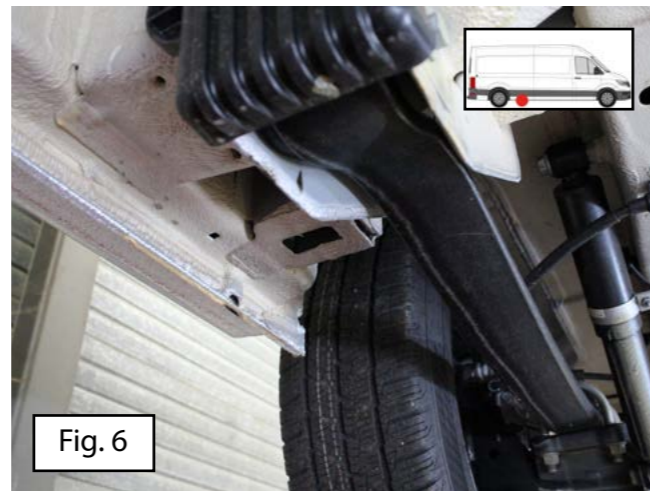


Fig. 6



Fig. 13

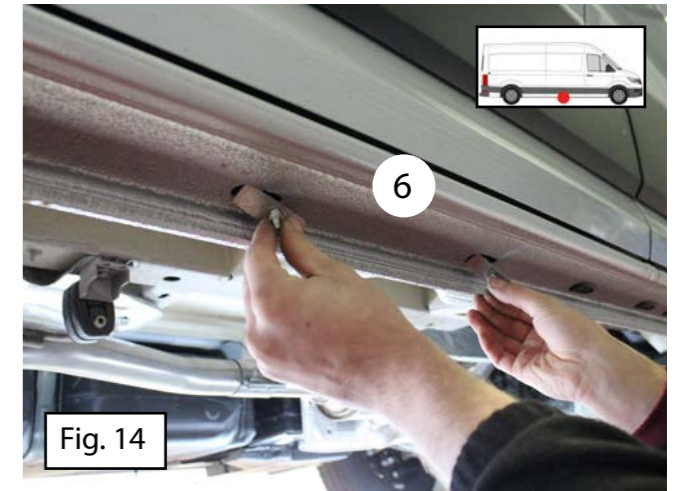


Fig. 14

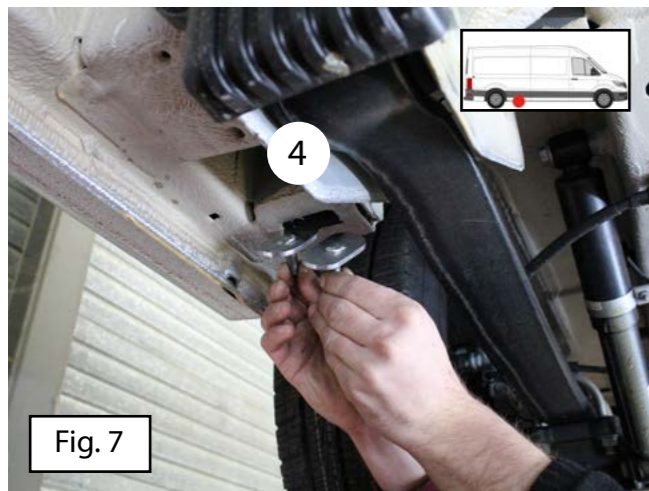


Fig. 7

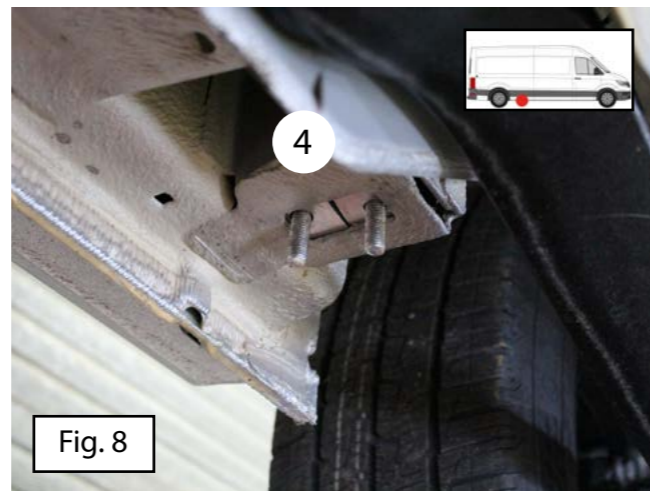


Fig. 8

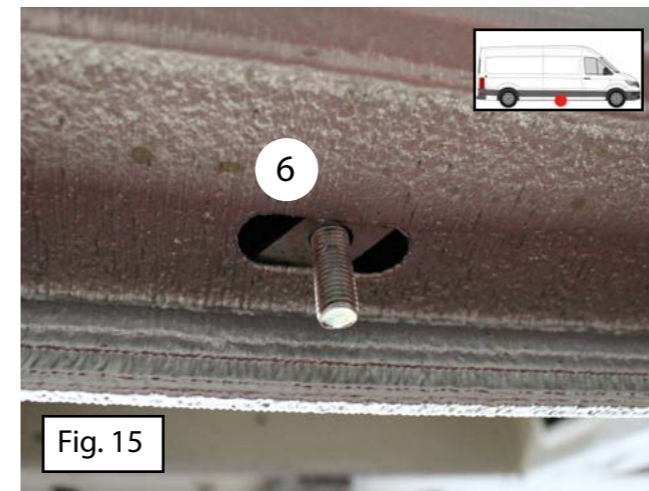


Fig. 15



Fig. 16



Fig. 17

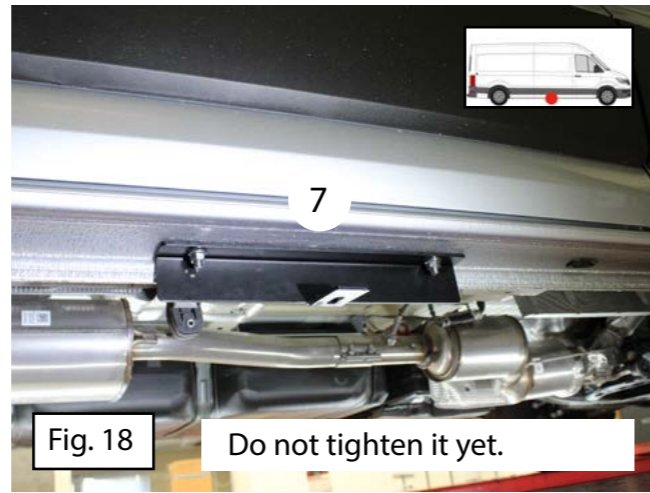


Fig. 18

Do not tighten it yet.



Fig. 25

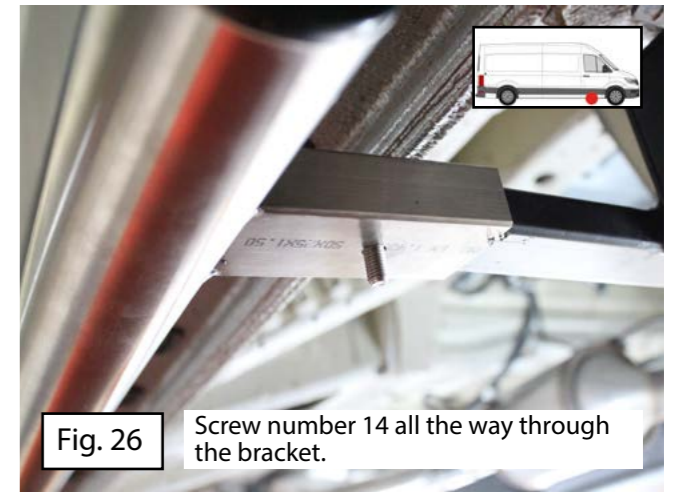


Fig. 26

Screw number 14 all the way through the bracket.

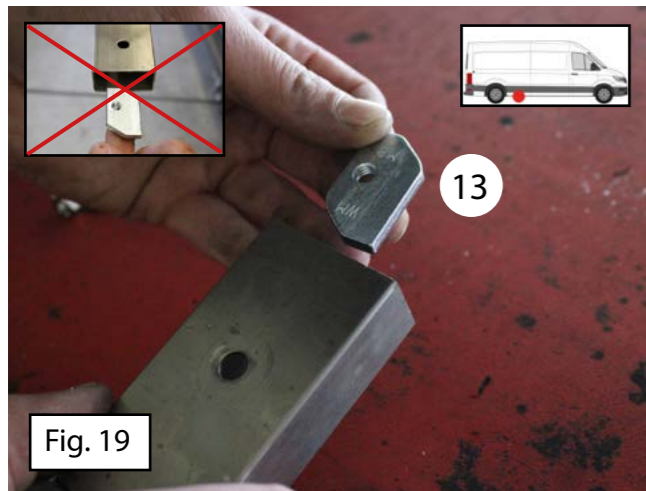


Fig. 19



Fig. 20

14

15

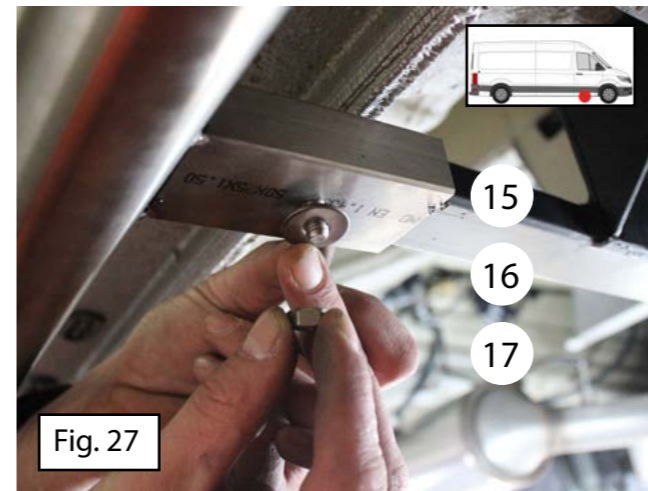


Fig. 27

15

16

17

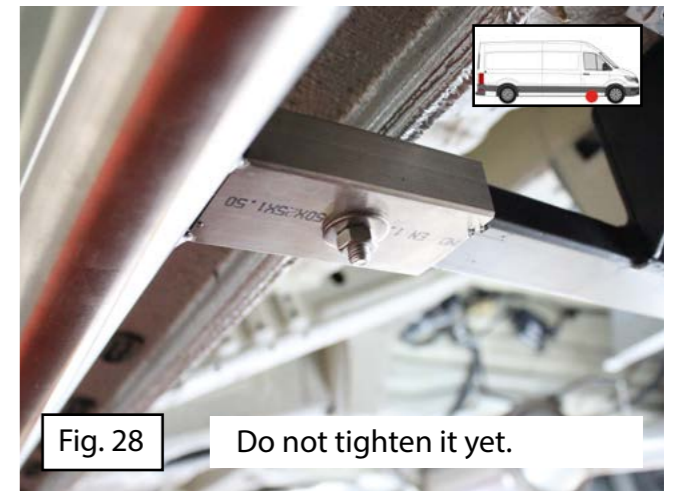


Fig. 28

Do not tighten it yet.

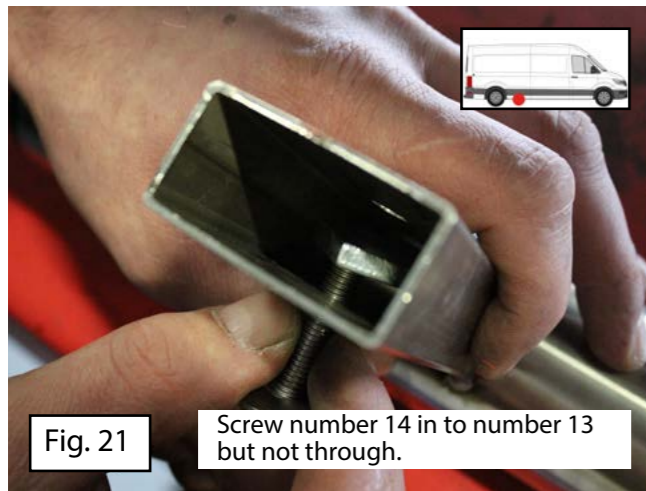


Fig. 21

Screw number 14 in to number 13 but not through.

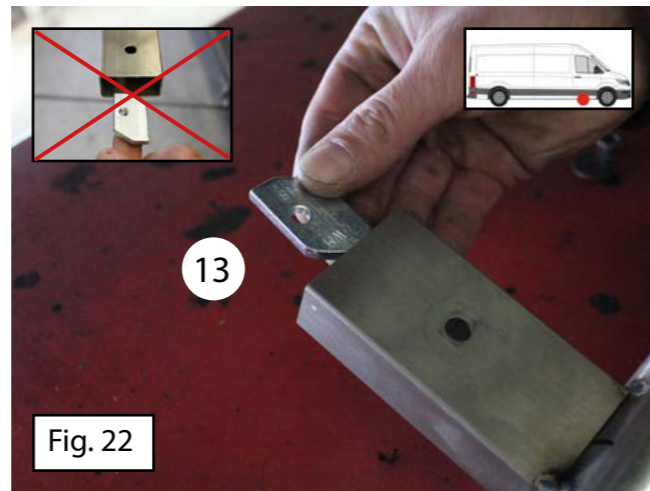


Fig. 22

13

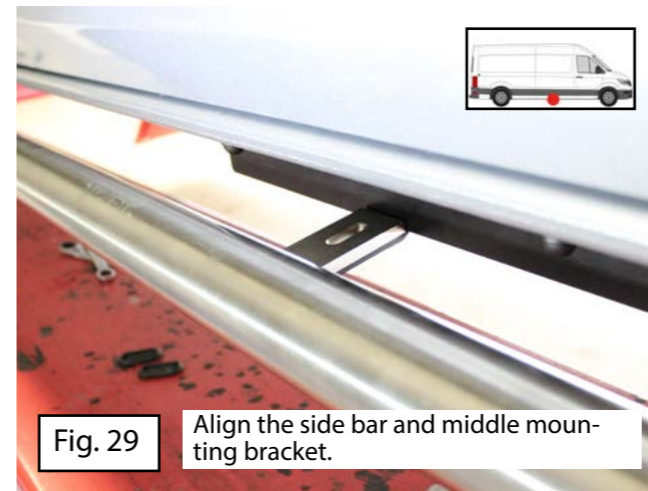


Fig. 29

Align the side bar and middle mounting bracket.

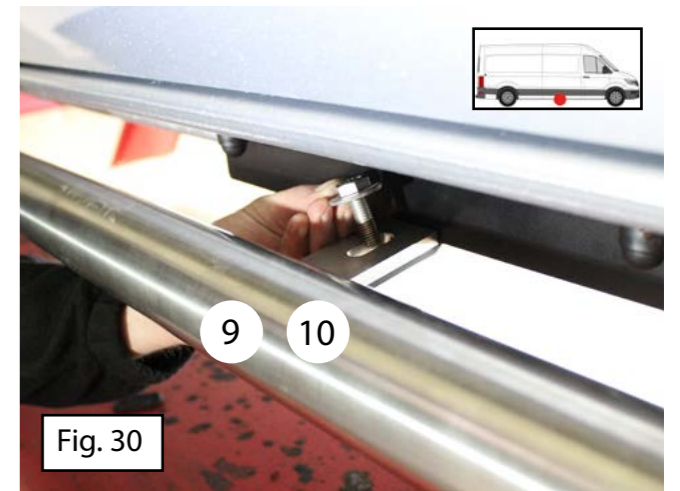


Fig. 30

9

10

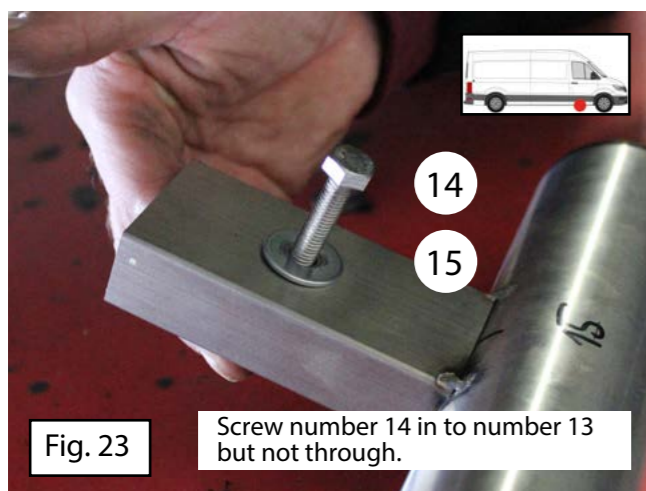


Fig. 23

Screw number 14 in to number 13 but not through.

14

15



Fig. 24

Place the side bar on the brackets.



Fig. 31

10

11

12

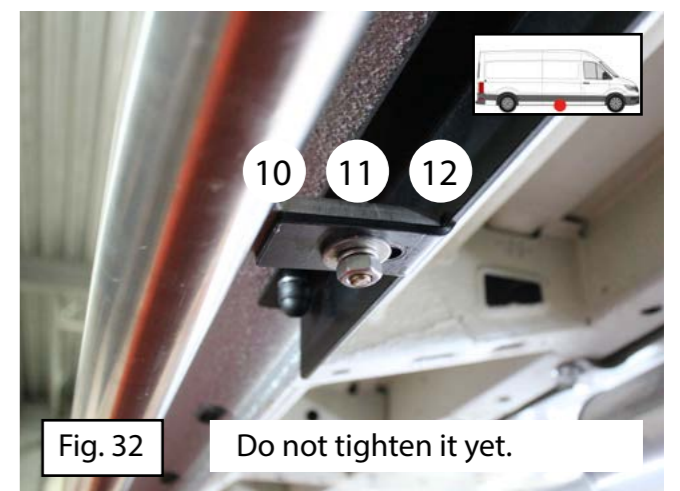


Fig. 32

10

11

12

Do not tighten it yet.

Matching accessories:

